


Model: 1520 PLOTTER



© 1980 COMMODORE BUSINESS MACHINES INC

The DEVICE NUMBER of the 1520 Printer/Plotter is factory set at # 6 so that it may be used in conjunction with a standard printer set at device # 4. Many customers have purchased the MAGIC DESK PROGRAM to use with the 1520. It requires that the plotter be set at device # 4. Please refer to schematic 1520009 (included in your peripheral start-up kit).

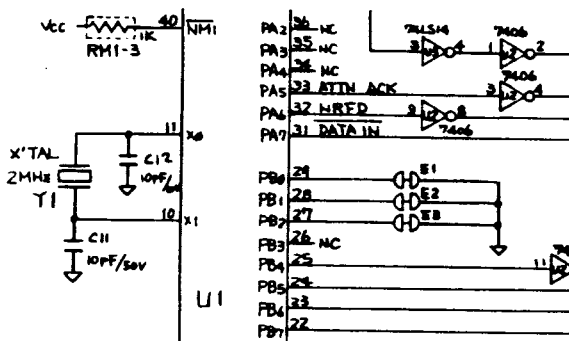

The DEVICE # is controlled by U1 at pins 27, 28 and 29. Locations E1, E2 and E3 may be found on the bottom of the PCB. E2 has been cut at the factory. To restore the 1520 Plotter to DEVICE # 4, EITHER:

- RE-SOLDER the trace on the board
- OR
- JUMPER pins 28 and 29 of I.C. U1

To increment the device number from # 5 through # 11:

- LIFT the respective pin on I.C. U1
- OR
- CUT the appropriate trace

- # 5 Lift pin 29
- 6 Lift pin 28
- 7 Lift pins 28 and 29
- 8 Lift pin 27
- 9 Lift pins 27 and 29
- 10 Lift pins 27 and 28
- 11 Lift pins 27, 28 and 29